

WARNING

The item(s) mentioned is sold and intended to be used as a massager. This massager is not a toy. Keep out of reach of children. For external use only. We bear no responsibility for the product should the product be used in any manner other than its intended use. In the case of non-waterproof massagers, user must take extreme care not to let the item get wet. In the case of waterproof massagers, ensure the cap is fully screwed on to avoid any internal water damage. Store your massager on its own and not combined with other devices or personal products. Allow massager to cool down before storing away. You should refer to the list of materials found on the package to see if the item contains materials that may cause allergic reactions. To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen, inflamed, infected, irritated areas or skin lacerations. No medical claims are warranted or implied by the use of this product. We do not take any responsibility and we are not liable for any damage caused through use of the products, whether as indirect, special, incidental or consequential damages.

90 DAY LIMITED WARRANTY

If your product fails to work due to any defect in workmanship or materials, we will replace your product with a like or similar item within 90 days of purchase. Simply follow the warranty form procedure located at: [bswish.com/warranty](https://www.bswish.com/warranty)

ADDITIONAL LANGUAGES



Additional user guide languages located at:
[bswish.com/manuals](https://www.bswish.com/manuals)

bswish

CLASSIC LINE

User Guide

[bswish.com](https://www.bswish.com)

Designed in California

BATTERY INSERTION

Classic Line personal massagers are battery operated. On the outside of the packaging it will state what types of batteries are needed for the personal massager you have chosen. Ensure you have the correct size batteries and then carefully remove the battery compartment cover and slide the batteries into the battery compartment as shown below, then replace the battery compartment cover.



HOW TO USE YOUR MASSAGER

Classic Line personal massagers are operated by the click of the dual-purpose power and function button. **1** Click the button once to turn on your personal massager. **2** The button will glow white and your massager will turn on. **3** The 5-functions are cycled through with the click of this single button. **4** To turn off your Classic Line massager hold the button for 3 seconds or click through all 5-functions and on the last click your massager will turn off.



Off



On



Low



Medium



High



Flutter



Tease

CARING FOR YOUR MASSAGER

The life of your massager will be greatly increased with proper maintenance and care. Be sure to wash before first use and after each use. Clean using a non-alcohol based antibacterial soap and water, or a dedicated personal massager cleaner. Ensure your massager is completely dry and remove batteries before storing.

CHOOSING THE PROPER LUBRICANT

It's important to use the correct lubricant in order to avoid damaging the coating of your massager. If your massager contains silicone, then you must use a water-based lubricant. If your massager contains PU/ABS plastic, then you may use any oil-free based lubricant.