

WARNING

The item(s) mentioned is sold and intended to be used as a massager. This massager is not a toy. Keep out of reach of children. For external use only. We bear no responsibility for the product should the product be used in any manner other than its intended use. In the case of non-waterproof massagers, user must take extreme care not to let the item get wet. In the case of waterproof massagers, ensure the cap is fully screwed on to avoid any internal water damage. Store your massager on its own and not combined with other devices or personal products. Allow massager to cool down before storing away. You should refer to the list of materials found on the package to see if the item contains materials that may cause allergic reactions. To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen, inflamed, infected, irritated areas or skin lacerations. No medical claims are warranted or implied by the use of this product. We do not take any responsibility and we are not liable for any damage caused through use of the products, whether as indirect, special, incidental or consequential damages.

b s w i s h

PREMIUM LINE

User Guide

90 DAY LIMITED WARRANTY

If your product fails to work due to any defect in workmanship or materials, we will replace your product with a like or similar item within 90 days of purchase. Simply follow the warranty form procedure located at: bswish.com/warranty

ADDITIONAL LANGUAGES



Additional user guide languages located at:
bswish.com/manuals

bswish.com

Designed in California

CHARGING INSTRUCTIONS

Premium Line personal massagers are conveniently charged via a USB magnet-pin connection. **1** Simply plug the charger's USB end into a USB charging socket. **2** Align the charger's magnet-pin with the magnet-pin located on the exterior of your personal massager. For bullet massagers, twist the bullet's cap counter-clockwise to reveal the pins. **3** The pins will adhere magnetically and your personal massager will begin to charge. Do not use your massager while it is charging. Do not charge for more than 24 hours and only use the original charger provided by B Swish. Do not expose your massager to temperatures above 140° (60°).



HOW TO USE YOUR MASSAGER

Premium Line massagers are operated via the power button  and the +/– function buttons. **1** To turn on the massager, press and hold the power button for 3 seconds. The button with glow blue and your massager will begin to vibrate. For bullet massagers, press and hold the power button located on the bullet for 3 seconds, a small vibration indicates the bullet is on. **2** To explore the 7-functions, simply press the + button to select the next function and – button to select the previous function. For bullet massagers, push the power button on the bullet to change functions, or use the included wireless remote. **3** To turn off the massager press and hold the power button for 3 seconds. For bullet massagers, press and hold the power button located on the bullet for 3 seconds.



Low



Medium



High



Climb



Flutter



Flurry



Tease

CARING FOR YOUR MASSAGER

The life of your massager will be greatly increased with proper maintenance and care. Be sure to wash before first use and after each use. Clean using a non-alcohol based antibacterial soap and water, or a dedicated personal massager cleaner. Ensure your massager is completely dry and remove any potential batteries before storing.

CHOOSING THE PROPER LUBRICANT

It's important to use the correct lubricant in order to avoid damaging the coating of your massager. If your massager contains silicone, then you must use a water-based lubricant. If your massager contains PU/ABS plastic, then you may use any oil-free based lubricant.